

Notes:



INSTRUCTION MANUAL

RECHARGEABLE BUG ZAPPER

V3 October 2018

Product Number: 71985

Model Number: CMZ985

Tested and approved to: AS/NZS 60335.2.59

STINGER BUG SENTINEL® RECHARGEABLE BUG ZAPPER

PRODUCT DIMENSIONS: 21 x 21 x 33cm
GROSS WEIGHT: 2.5kg
TECHNICAL SPEC: 240V ~ 50HZ 55mA, DC 7.5V
Class III re-chargeable ELV insect killer 6 watts
IPX4 rated

PARTS & ACCESSORIES:
1 x bug zapper
1 x UV lamp (pre-installed)
1 x AC-DC adaptor



CHARGING THE BUG ZAPPER

- Turn the ON/OFF dial to the OFF position.
- Plug the adaptor into the port on the bug zapper and into the 240-volt wall socket.
- Charge for 8 hours or until the indicator light above the dial illuminates to indicate the battery is fully charged.
- Turn ON/OFF dial into ON position to activate the zapper.
- **IMPORTANT: The bug zapper UV light will not operate when on charge.**

USING THE AC-DC Adaptor

- Turn dial to OFF.
- Plug AC-DC adaptor into the charging port of the bug zapper.
- Plug the other end into any standard 240-volt wall outlet.

OPERATION

The UV lamp in the bug zapper attracts flying insects to the electrified grid and kills them.

POSITIONING

- Locate your bug zapper 1-3 metres from the area you wish to rid of insects.
- The bug zapper will attract insects, therefore make sure it is positioned as far away from areas where you sit, eat or spend time indoors or outdoors.

OUTDOOR USE:

The rechargeable bug zapper is not intended for permanent outdoor installation but can be used outside when disconnected from the AC-DC adaptor.

STINGER BUG SENTINEL® RECHARGEABLE BUG ZAPPER

PRODUCT OVERVIEW



IMPORTANT- SAFETY INSTRUCTIONS.

READ CAREFULLY BEFORE USE AND KEEP FOR FUTURE REFERENCE.

- 1) Heed warnings and retain instructions on the appliance. The operating instructions should be adhered to.
- 2) This product contains a sealed lead acid batter which must not be disposed of in land fill. Dispose of in an environmentally safe manner.
- 3) Do not remove the cage to access the electrified grid.
- 4) Do not modify paint or change the bug zapper in any way.
- 5) Do not use this appliance near water (over pond, bath tubs, kitchen sinks or above swimming pools).
- 6) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- 7) Children should be supervised to be sure they do not play with the appliance.
- 8) The appliance is not to be used in locations where flammable vapour or explosive dust is likely to exist.
- 9) The appliance should be situated away from heat sources such as radiators, stoves and other appliances that produce heat.
- 10) The appliance should be cleaned only as recommended in these instructions.
- 11) Do not submerge the main body of the Bug Zapper in water.
- 12) Do not place any object through any of the openings in the bug zapper.
- 13) The appliance should always be serviced by a qualified service technician.
- 14) IPX 4 Weatherproof rated and suitable for indoor and outdoor use.
- 15) WARNING an electric shock hazard may exist if water from a garden hose is directed at insect killer.
- 16) WARNING when using extension cords, keep the socket outlet away from moisture and avoid damage to cord.
- 17) The appliance is only to be used with the power supply unit provided with the appliance
- 18) The appliance needs to be kept out of reach of children
- 19) The Appliance is not to be used in locations where flammable vapour or explosive dust is likely to exist.
- 20) DANGER HIGH VOLTAGE

CLEAN AND MAINTANENCE. Cleaning the grid will extend the product life and promote more efficient operation. Ensure the bug zapper is turned OFF, remove dead insets from the grid with a fine soft paint brush or an air blower. Be careful not to damage the grid or lamp. It is recommended that the Bug Sentinel be cleaned every week to ensure grid is at maximum working efficiency.

BUG TRAY CLEANING: Turn the zapper off and remove the bug tray by sliding it straight out. Empty the contents and replace by sliding it back into the zapper.

UV LAMP: The UV lamp is long wave and therefore safe to use.
 Replacement lamps can be purchased from www.bugzapperlamps.com.au model #71462

TROUBLE SHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTION
Black light UV lamp does not light and there is zapping on the electrified grid.	<ol style="list-style-type: none"> 1) Zapper is not charged. 2) Battery is faulty. 	<ol style="list-style-type: none"> 1) Plug adaptor into zapper and into power point. Ensure socket is ON and zapper is OFF to charge. 2) Contact after sales support on 1800 677 982.
Lamp operates but there is no zapping on the grid.	<ol style="list-style-type: none"> 1) Zapper is not charged. 2) Electrified grid may have a large dead insect shorting it. 	<ol style="list-style-type: none"> 1) Plug adaptor into zapper and into power point. Ensure socket is ON and zapper is OFF to charge. Check for insects on the grid, clean grid following instructions above. 2) No insects around contact after sales support 1800 677 982.
Intermittent or constant zapping of electrified grid.	<ol style="list-style-type: none"> 1) Electrified grid may have a large insect shorting it out. 2) Large insect has moved wire grid closer causing the grid to arc constantly. 	<ol style="list-style-type: none"> 1) Turn off bug zapper and follow cleaning instructions (page 4). 2) If the grid is out of alignment call After sales support 1800 677 982.
Bug zapper does not attract flying insects.	<ol style="list-style-type: none"> 1) Bug zapper is positioned incorrectly/ not operated at correct times. 	<ol style="list-style-type: none"> 1) Review positioning the Bug Zapper (page 4) and re-position. Operate 24/7 or dusk to dawn. 2) Bait zapper for odour specific insects or use insect specific lures Call 1800 677 982 for more info.