


INSTALLATION & OPERATIONS MANUAL

ELECTRICAL SAFETY & COMPLIANCE

| | |
|--------------------------------------|---|
| Equipment: | Sectarid FlyTrap Model FT-40 |
| Manufacturer: | The Kelly Company Pty Ltd 20 Tucks Road Seven Hills Sydney NSW 2147 Australia |
| Compliance Electrical Safety: | AS/NZS AS/NZS 60598.2.1 |
| Compliance EMC: | AS/NZS CISPR 15 |

Sectarid
FLYTRAP[®]

Glue Board Insect Killer



Store Location:

Department:



**NEED WARRANTY OR SERVICE?
FREE CALL OUR CUSTOMER SERVICE
DEPARTMENT ON 1 800 677 981 BEFORE
RETURNING THIS PRODUCT TO RETAILER**

the
KELLY COMPANY

**20 TUCKS ROAD SEVEN HILLS SYDNEY
NSW 2147 AUSTRALIA**

IMPORTANT SAFETY INFORMATION

Read Instructions: The safety and operating instructions should be read before the FT-40 FlyTrap is operated.

Indoor Use Only: The FT40 FlyTrap is for INDOOR USE only and is not to be exposed to moisture or rain

Heed Warnings: All warnings on the appliance and in the operating instructions should be adhered to and all operating and user instruction should be followed.

Warning: This appliance is not intended for use by persons, including children, with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

Water and Moisture: The appliance should not be used near water for example, near a bathtub, washbowl, kitchen sink, washing machine, or near a swimming pool.

Ventilation: The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug or similar surfaces that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.

Heat: The appliance should be situated away from heat sources such as radiators, stoves and other appliances (including amplifiers) that produce heat.

Power Sources: The appliance should be powered only as described in these operating instructions or as marked on the appliance.

Cleaning: The appliance should be cleaned only as recommended by the manufacturer and in accordance with the water and moisture warnings stated in this manual.

Nonuse Periods: The appliance should be unplugged from the outlet when left unused for long periods of time.

Object and Liquid Entry: Do not submerge the FT-40 in water. Do not place any objects through any openings in the FT-40

Damage Requiring Service: The appliance should be serviced by qualified service personal when:

- Objects have fallen or liquid has been spilled into the appliance.
- The appliance has been exposed to rain.
- The appliance does not operate normally or exhibits a change in performance.
- The appliance has been dropped or the enclosure is damaged.

Servicing: The user should not attempt to service the appliance beyond that described in the operating instructions doing so will void the warranty.

Flexible Cable: If the external flexible cable of the FT-40 is damaged, it shall be exclusively replaced by The Kelly Company Pty Ltd or a authorised service agent

WARRANTY

Congratulations on purchasing **Sectarid Fly Trap®** the Glue Board Flying Insect Killer! To ensure you achieve maximum life and service from this quality appliance from The Kelly Company please read the Warranty information and record purchase information as requested.

Warranty: The Kelly Company Pty. Ltd. warrants your **Fly Trap®** excluding the lamp, to be free from defects in materials and workmanship under normal use and service for a period of **twelve (12) months** from the date of original purchase. The **Fly Trap®** Lamp warranty period is for **three (3) months** from the date of original purchase. Subject to this warranty defective units or parts will, at the company's discretion, be repaired or replaced free of charge excluding return freight or postage, which will be paid by the purchaser.

The provision of this warranty shall not apply to any **Fly Trap®**, which has been subject to abuse and misuse, neglect or accident. Nor does it apply to any **Fly Trap®** that, within the warranty period, has been used for a purpose for which it has not been designed or which has been repaired or altered in such a way so as to adversely affect its performance and reliability. Service by an unauthorised source voids the warranty.

The Kelly Company Pty. Ltd. neither assumes, nor authorises any person to assume for it, any other liability in connection with its products. No responsibility is assumed for any consequential damage that may result from the use of the product nor for damages due to accident, abuse, lack of responsible care, the fixing of any unauthorised attachment, loss of parts or subjecting this product to any but the specified voltage.

Warranty: Immediately complete the following Warranty / **Proof of Purchase** information details and retain receipt or invoice as proof of purchase will be required when claiming under this warranty.

Date of Purchase:

Supplier Name & Address:

To Obtain Service or to order replacement Fly Trap Glue Boards and UV Lamps contact Customer Service at The Kelly Company Pty Ltd 20 Tucks Road Seven Hills Sydney NSW 2147 Australia on 02 8811 3716 between 9.00 am and 5.00 pm EST

Copyright © & Trade Marks™

The material used for the production of this owners manual including text, graphics and layout are owned by The Kelly Company Pty Ltd and protected by copyright under the laws of Australia. This Manual also includes registered trade marks and trade marks which are the subject of pending applications by The Kelly Company

REPLACEMENT LAMPS

COPY ~ COMPLETE ~ MAIL ORDER FORM

SECTARID FLYTRAP® FT-40 REPLACEMENT LAMP

| Qty | Item | Price* | Total |
|---------------|------------------------------------|---------|--------|
| | Replacement Lamp for FlyTrap FT-40 | \$19.50 | |
| | Packaging & Post | \$6.50 | \$6.50 |
| *Includes GST | | Total | |

DELIVER TO:

Name: _____

Address: _____

Post Code: _____

Phone: _____

Email: _____

PAYMENT BY (please circle):

Cheque | Money Order | Credit Card

For Credit Card Payment Complete:

Card Number: _____

Name on Card: _____

Signature: _____ Expiry Date / /

COPY & COMPLETE ORDER FORM

Mail to:
The Kelly Company Pty Ltd
P.O. Box 516 Blacktown
Sydney NSW 2148

WELCOME

Thank you for purchasing the Sectrarid FlyTrap® FT-40. This manual will provide you with directions for the safe and efficient operation of your FlyTrap® FT-40. Please read the manual carefully and keep it in a safe place for future reference. Failure to operate the FlyTrap® FT-40 in accordance with the instructions in this manual may cause damage to the unit.

Your new FlyTrap® FT-40 will provide you with years of safe, trouble free service provided it is used in strict accordance with this Manual

OPERATION & MOUNTING:

To achieve maximum performance from your Sectrarid FlyTrap® FT-40 please review and observe the following recommendations:

- i. Light sensitive flying insects are attracted to the black light UV lamp and trapped on the adhesive board positioned in the removable plastic support tray
- ii. The Sectrarid FlyTrap® FT-40 is designed for areas up to 100 square metres. For larger areas multiple units should be used
- iii. The Sectrarid FlyTrap® FT-40 should be mounted a minimum of 1.7 to 2.0 metres, from the base of the unit to floor level
- iv. For ceiling / suspended mounting use the 'S' hooks and wire provided are connected to the suspension holes/lugs located at each end/top of the FT-40.

For wall mounting use the bracket provided; firstly use the template, which is a part of the carton, to achieve correct positioning of wall penetrations relative to the holes in the mounting bracket. Separate screws and plugs are provided for mounting to concrete walls or masonry walls

- v. If a power extension lead is used it **MUST** be suitable for the intended use. Keep the extension lead dry and off the floor; avoid heat, oil and sharp edges.

WARNING:

Sectrarid FlyTrap® FT-40 is designed for **INDOORS USE ONLY**, do not use outdoors

SPECIFICATION:

Power Factor: 470

Supply Current: 431 milliamps

Rated Ambient Temperature: 25°C

UV BLACK LIGHT LAMPS:

The UV Black Light Lamp used in your Sectrarid FlyTrap® FT-40 are long wave and therefore safe. The output / intensity of the lamp in the invisible ultraviolet frequency range reduce with use. For maximum attraction of flying insects replace the lamp every 12 months.

The Sectarid FlyTrap® is a new and innovative answer to flying insect control where hygiene is an important consideration. Utilising adhesive board technology FlyTrap has been specifically designed for use in food preparation areas where the use of conventional 'zapping' units is undesirable. FlyTrap® can be free standing, wall mounted or ceiling suspended.

These instructions are intended to help you operate FlyTrap® to gain maximum performance and efficiency.

WARNING

FlyTrap® is suitable for indoor use only.

INSTALLATION

FlyTrap® requires certain conditions to ensure the effective control of flying insects in your premises:

1. It must be correctly sited.
2. It must be in operation 24 hours a day.
3. Tubes must be replaced every 12 months.
4. The SectaTac Glue Board must be replaced every 4 weeks.

POWER REQUIREMENTS


FlyTrap® is designed to operate from a 240 Volt power outlet. The unit must be connected to an earthed electrical power supply. The mains lead supplied with FlyTrap® is already fitted with a molded SAA Approved plug.

- Step 1.**
Place SectaTac Glue Board on plastic tray provided.
- Step 2.**
Peel back protective covering on SectaTac Glue Board as shown in diagram.
- Step 3.**
Slide plastic tray into position as shown.

SLIDE INTO POSITION

PEEL BACK PROTECTIVE COVERING

TUBE REMOVAL

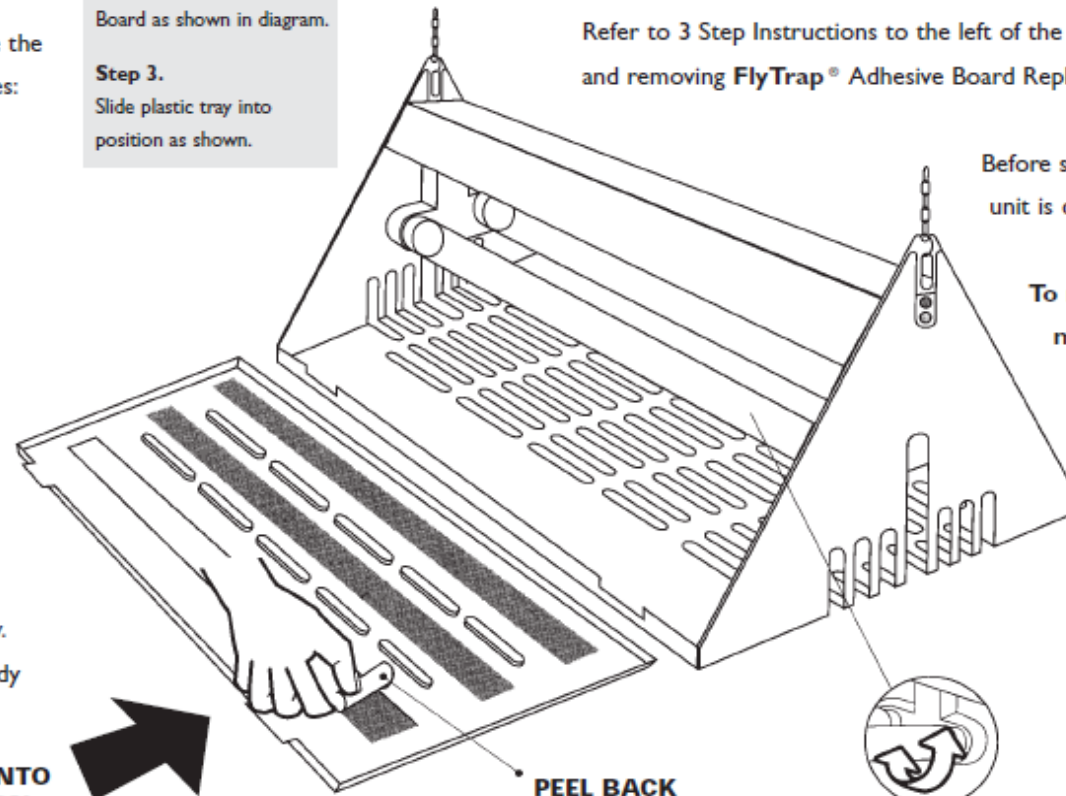

SITING

FlyTrap® should be positioned at least two metres above floor level preferably in the darkest place within the area to be protected, away from windows and skylights thus avoiding any competition with natural daylight or sunlight.

Larger areas may require two or more units and positioning requires careful consideration to ensure maximum protection. Each unit should be centrally positioned to achieve maximum coverage and instructions given in the Installation Section should be followed.

If FlyTrap® is to be wall mounted the template included as part of the carton must be used in order to achieve correct alignment of the unit to the mounting bracket and wall.

Refer to 3 Step Instructions to the left of the diagram for the procedure for fitting and removing FlyTrap® Adhesive Board Replacement and Lamp to and from FlyTrap®.

Before servicing FlyTrap® always ensure that the unit is disconnected from the mains power supply.

To maintain FlyTrap's maximum efficiency

1. Replace the FlyTrap® Glue Board Cat. No. 71273 every 4 weeks or more frequently if needed.
2. Replace the Ultra Violet Lamps Cat No. 71108 every 12 months.