

INSTRUCTION MANUAL Stinger Rechargeable

PRODUCT DIMENSIONS:	17.7 x 17.7 x 31.8cm
GROSS WEIGHT:	1.1 kg
TECHNICAL SPEC:	Input: 100-240~ 50/60Hz, 0.5A Output: 5.0Vdc 1.0A Class III re-chargeable ELV insect killer 4 W
BATTERY SPEC:	Li-Ion 3.7V 5000mAh

Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The product is warranted for 1 year from the date of original purchase.

The provision of this warranty shall not apply to any product which has been subject to abuse or misuse, neglect or accident. Nor does the warranty apply to any product that has within the warranty period been used for a purpose for which the product has not been designed or which has been repaired or altered in such a way to adversely affect its performance and reliability. Service by an unauthorized source may void the warranty.

The Kelly Company Pty Ltd neither assumes or authorizes any person to assume responsibility for damages due to accident, abuse, lack of responsible care, or the fixing of any unauthorized attachment or subjecting the product to any but 240-volt power.

Complete the following proof of purchase information and retain your store receipt/ and credit card receipt as proof of purchase, this will be required when claiming under warranty.

Date of purchase: _____

Retailer: _____

Warranty claim

1. Return Stinger Rechargeable in original box or re-pack securely in a new box. Please include a letter with return address, written details of product failure and proof of purchase.
2. Contact The Kelly Company Pty Ltd for return freight details on 1800 677 982 or email sales@kellycompany.com.au.

Failure to operate the product in accordance with the instructions may cause damage to the unit and void warranty.

INSTRUCTION MANUAL

Stinger Rechargeable Bug Zapper



Need warranty or service?

*Free call our customer service department on 1800 677 982
before returning this product to the retailer*

Product: Stinger Rechargeable Bug Zapper
Model: SRBZ4
Product Code: 71982

INSTRUCTION MANUAL Stinger Rechargeable

IMPORTANT SAFETY INSTRUCTIONS – retain and keep in a safe place.

- 1) Heed warnings and retain these instructions. The operating instructions should be adhered to.
- 2) This product contains a lithium ion battery which must not be disposed of in land fill. Dispose of in an environmentally safe manner.
- 3) Do not remove the cage to access the electrified grid.
- 4) Do not modify paint or change the bug zapper in any way.
- 5) Do not use this appliance near water (over pond, bath tubs, sinks or above swimming pools).
- 6) This appliance isn't intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 7) Children should be supervised to ensure that they do not play with the appliance.
- 8) Do not use this appliance in locations where flammable vapour or explosive dust is likely to exist.
- 9) The appliance should be situated away from heat sources such as radiators, stoves and other appliances that produce heat.
- 10) The appliance should be cleaned only as recommended in these instructions.
- 11) Do not submerge the main body of the Bug Zapper in water.
- 12) Do not place any object through any of the openings in the bug zapper.
- 13) The appliance should always be serviced by a qualified service technician.
- 14) Indoor or undercover use only. Not suitable for permanent outdoor installation.
- 15) Warranty on unit is 12 months, warranty on globe is 3 months
- 16) For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.
- 17) Warning High Voltage 

Trouble shooting

CUSTOMER SERVICE: Freecall 1800 677 982 or email sales@kellycompany.com.au

PROBLEM	POSSIBLE CAUSE	CORRECTION
UV lamp does not operate. Grid IS zapping	Lamp has expired or is faulty	Purchase replacement UV lamp online or call customer service for lamp warranty
	Lamp is not positioned correctly	Ensure lamp has been fitted securely into the lower and upper lamp holder
UV lamp does not operate Grid NOT zapping	Zapper is not charged.	Plug adaptor into zapper and power socket. Ensure socket is ON and zapper is OFF to charge.
	Electrified grid may be shorted by a large insect	Check for insects on the grid, clean grid following instructions.
	Zapper recharger is still plugged into unit and wall socket	Zapper will not operate when charging. Remove from adaptor and turn ON
Battery isn't charging	240V power outlet wasn't ON	Ensure adaptor is connected to 240V (only) power socket in ON position
	Zapper isn't turned OFF to charge	Red charging light will illuminate when zapper is turned off and its charging.
	Battery or Adaptor are faulty	Contact customer service

INSTRUCTION MANUAL Stinger Rechargeable

Please read the manual carefully, failure to operate the Stinger Rechargeable bug zapper in accordance with the instructions in this manual may cause damage to the unit. Your portable/rechargeable Stinger (SRBZ4) uses safe ultraviolet and energy saving LED light and high voltage electrified grid to effectively attract, capture and kill flying insects.

Charging the Stinger Rechargeable Bug Zapper

Although the zapper may come partially charged, it is recommended that the battery be fully charged before the first use. Only use the ACDC recharger 8V AC-DC supplied with this product.

- 1) Turn the zapper into OFF position by pressing the orange ON/OFF button. This will stop the UV light and grid from functioning.
- 2) Plug the adaptor into the charging port on the bug zapper and the plug into a 240V outlet.
- 3) The red "recharge" indicator light will illuminate when the product is on charge.
- 4) For best results, charge the bug zapper for 6-8 hours (full charge)
- 5) The bug zapper will not operate when connected to the charger. Remove adaptor before use.

Warning: for the purposes of recharging the battery, use only the detachable supply unit provided with this appliance.

Operating the Stinger Rechargeable Bug Zapper

After a 6-8 hour charge, the Stinger Rechargeable UV globe and electrified grid will be operational for up to 8 hours.

Remove the ACDC adaptor from the port at the front of the bug zapper and press the orange ON/OFF switch to illuminate the UV light and power up the electrified grid.

The electrified grid of the bug zapper is now supplied with electricity and will zap insects attracted to the grid by the UV LED globe

To increase the attracting capabilities of your zapper consider adding an insect lure available online or from the original store of purchase.

Globe replacement

Replacement lamp product code **#71461**

UV LED is long wave and safe for household use.

Globe replacement instructions are downloadable from our website. This should only be attempted by a skilled person. To order online: www.bugzapperlamps.com.au or free call customer service 1800 677 982

Outdoor use: The Rechargeable bug zapper is not intended for permanent outdoor use. This product is intended for use undercover, indoors or temporary use outdoors in clement weather.

Cleaning and maintenance: Cleaning the grid will extend the product life and promote more efficient operation. Ensure the bug zapper is turned OFF, remove dead insets from the grid with a fine soft paint brush or an air blower.

Be careful not to damage the grid or globe; clean weekly

Bug tray cleaning: Tray is located above the red charging light.

Turn the zapper off and remove the bug tray by sliding it straight out. Empty the contents and replace by sliding it back into the zapper.